


A. Spindelberger, Paul-Heidelberg-Str. 11, 34295 Edermünde / Germany

Paul-Heidelberg-Straße 11
34295 Edermünde / Grifte . Germany
Tel: +49 (0) 5665 7044
Fax: +49 (0) 5665 7725
UstIdNr: DE 200803614
eMail: cobra@cobratrailer.com
www.cobratrailer.com

Backfitting from shock absorbers at COBRA trailers


Type 1: until approx. 1987 / 1988

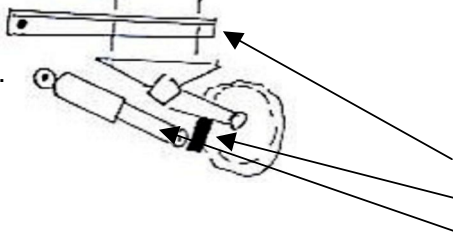

Short Axle Support Bracket, 200 mm long.
To equip the trailer with shock absorbers, shock absorber brackets and back supports must be installed.
labour time approx. 1,5 h

Conversion Set:
2 counter support sheets, galvanized. (right + left)
2 Brackets - untreated, to weld on the axle
2 shock absorbers with bolts

Type 2: from approx. 1988

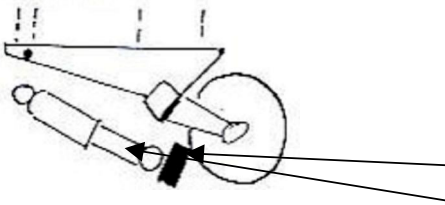

Long Axle Support Bracket, 400 mm long.
The axles were delivered occasionally with or without Shock Absorber Brackets
labour time approx. 1 h

Conversion Set:
2 Brackets - untreated, to weld on the axle
2 shock absorbers with bolts

Type 3: from approx. 1992



**View
from below !**

Long Axle Support Bracket, 400 mm long..
Alternatively to the variant from approx. 1988
the knuckles can also have slots to put in the shock absorber brackets.

You can identify them on black plastic plugs approx. 45 x 12 underneath the knuckle .

Welding is **not** necessary. The brackets are clamped.
labour time approx. 0,5 h

Conversion Set:
1 set clamp brackets
2 shock absorbers with bolts

An allocation by VIN # is not possible!

Your **COBRA-Team**