

## Affixing competition number


You need: 1 bin with hot water (approx. 50°C, 1 sponge, 1 aerosol can, 1 cleaning cloth, 1 ribbon, 1 water level, 1 kitchen scraper or a plastic blade (squeegee), fixing pins, dishwashing detergent.

**WARNING:** The room temperature has to be at least 18°C, if the temperature is under 18°C, the glue doesn't have the effect !

1. Clean the surface of your trailer.
2. Mix a bit of the dishwashing detergent with the hot water.
3. Now draw with a pencil the horizontal and the distance on your trailer.



4. Spray the mix on the trailer fin. (Aerosol can or sponge)
5. Detach the protective paper and affix the letters / ciphers to the wetted position. The position has to be well wet!

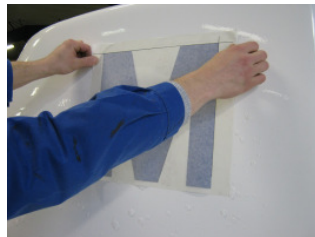

6. Now you can move the letters, and respectively positioning to the right place.
7. When the letters are on the right place, push all the water strongly with the squeegee out from the middle.
  - push strongly, it has to be absolutely dry between the surface of the trailer and the letters.



8. If there is a bubble: puncture with a pin on a side of the blubber and the push the air out with the aid of the scraper.
9. Let it dry at least one our. The better the water was pushed out and the warmer it is, the sooner you can detach the transfer foil. If it has not been dewatered well, it can take days. Experience: **Wait 1 day**
10. Detach tranfer foil at a steep angle.